



Drive Adaptor Rotation Change Instruction

To change rotation of drive adaptor from clockwise to counter-clockwise follow these instructions:

1. Remove drive joint cap fitting and drive joint threaded fitting from drive joint housing.
2. Remove input/output shaft with gear and spacers from housing.
3. Reverse direction of cap fitting as shown. Apply small amount of Loctite to threads and insert into opposite side of housing.
4. Reverse direction of input/output shaft and insert into opposite side of housing.
5. Reverse direction of threaded fitting as shown. Apply small amount of Loctite to smaller threads and insert into opposite side of housing.

